




The ABK bench scale delivers reliable performance and easy weighing for items up to 260lb/120kg. Its sleek, stainless steel indicator offers superior sealing to protect from dust and ensure longevity. Date and time are supplied by the indicator and can be included in printouts. The oversized, backlit display is simple to read. Large buttons on the keypad are easy to see and use in any environment. The ABK is an excellent choice for parts counting, percentage weighing and dynamic weighing, while built-in limit lights make it ideal for checkweighing.

Right combination of features and performance make the ABK a winner for industrial applications

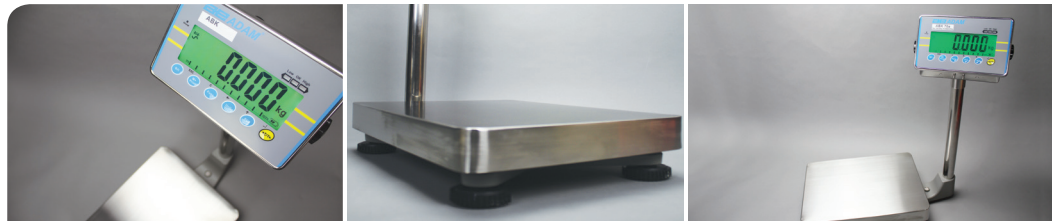

## Features

- Vivid, backlit LCD easily visible in any lighting conditions
- Capacity tracker built into display for easily monitoring possible overloads
- Programmable backlight can be set to “always on,” “always off” or “light only when weighing”
- Checkweighing LEDs light to clearly show under, over and acceptable limits
- Color-coded keys facilitate quick recognition of the most frequently used buttons
- Heavy-duty rubber feet ensure stability of unit
- Large, grade 304 stainless steel pan allows swift cleaning
- RS-232 interface is available to provide speedy connection to computers and printers
- Rugged construction stands up to industrial use
- Sealed keypad protects against dirt and spills
- Checkweighing with audible alarm
- Parts counting with preset sample sizes
- Simple operation allows quick startup and use with little or no training
- Zero-tracking feature ensures display returns to zero reading
- AC adapter included
- Rechargeable battery included for operation almost anywhere
- Programmable auto power-off to save energy

## Applications

- Weighing
- Parts counting
- Checkweighing
- Dynamic / animal weighing
- Percentage weighing

## About ADAM:

For more than 40 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam provides the right balance of speed, performance and value.

Model	ABK 16a	ABK 35a	ABK 70a	ABK 130a	ABK 260a
Capacity	16lb / 8000g	35lb / 16kg	70lb / 32kg	130lb / 60kg	260lb / 120kg
Readability	0.0005lb / 0.2g	0.001lb / 0.5g	0.002lb / 1g	0.005lb / 2g	0.01lb / 5g
Pan Size	11.8"x15.7" / 300x400mm				
Weighing Units	g, kg, lb, lb:oz, N				
Stabilization Time (sec)	2				
Interface	RS-232				
Calibration	External calibration				
Display	Backlit LCD with 1.6" / 40mm-high digits				
Power Supply	12VDC 800mA adapter / Internal rechargeable battery				
Operating Temperature	-10° to 40°C / 14° to 104°F				
Housing	Stainless steel indicator with die cast aluminum base				
Overall Dim.	11.8"x20.5"x24" / 300x520x610mm (wxdxh)				
Net Weight	17.4lb / 7.9kg				

## Accessories

Item number	Description
3102311619	In-use wet cover
700400103	RS-232 cable
3074010507	RS-232 to USB adapter (must order corresponding RS-232 cable)
1120011156	ATP thermal printer
3126011263	ATP thermal printer paper
3126011281	ATP thermal printer paper (pack of 10)
1100011297	AE402 relay box
600002028	AdamDU data collection program
700660290	Calibration certificate


## Key Accessories



**ATP thermal printer**  
Easy-to-use features combined with quick set-up equals a truly versatile thermal printer. A single push-button feed key and three easy-to-read LED indicators make operation simple.



**Relay Box**  
The relay box is connected by wire to the scale, and helps transmit signals to other devices.

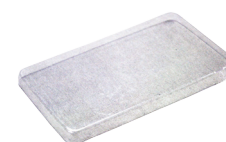

**In-use wet cover**  
In-use covers provide an easy and affordable way to help keep the balance clean and protected.

Supplied by